

User's manual

- English
- Français
- Deutsch
- Italiano
- Español



TWISTER
BEARING Technology

UCMA8/12 MAGMA Series Installation Guide


English

The package includes :

1. MAGMA Fan*1
2. Isolator-mounts*4
3. Screws*4
4. 3pin to 4 pin adaptor*1
5. Installation guide

Note

*Please keep the parts away from children to prevent accidental swallowing.

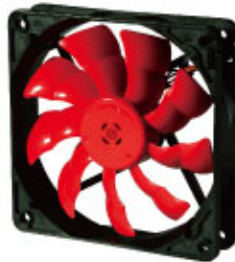

Installation :

1. PC Power OFF at all times during installation.
2. Please refer to the graphic above for the airflow directions.



3. Connect the 3-pin connector to a specific 3-pin 12V header on the motherboard. Or use the enclosed 3-pin to 4-pin adaptor to connect it to a 4-pin Molex from power supply.

How to use Isolator-mounts :

1. Identify the fan side.



3. Install the other side to the case and pull through the Isolator-mount to fix it.



Cleaning the fan blades :

1. Push out the blades carefully with your thumbs in the INNER area.



2. Install the fan side into the fan frame's screw holes and pull through the Isolator-mount to fix it.



4. Repeat the same to other corners to finish the installation.



2. DO NOT push out the blades with your thumbs in the OUTER area.



UCMA8/12 Guide d'installation serie MAGMA

Français

Contenu du package :

1. Ventilateur MAGMA*1
2. Anti-vibrateurs*4
3. Vis*4
4. Adaptateur 3 pins vers 4 pins*1
5. Guide d'installation

Note

*Veuillez conserver le contenu du package hors de portée des enfants



Installation :

1. Ne pas allumer le PC pendant l'installation.
2. Pour choisir le sens de circulation de l'air, veuillez vous référer à la photo ci-dessus.



3. Brancher le connecteur 3-pin 12V sur la carte mère ou utiliser l'adaptateur fourni pour connecter le ventilateur sur l'alimentation via la prise 4-pin Molex.

Comment utiliser les anti-vibrateurs :

1. Identifier le côté du ventilateur.



3. Faites passer l'autre partie dans les trous destinés au vis de votre boîtier.



Nettoyer le ventilateur :

1. Placer les pouces dans la partie centrale du ventilateur et pousser avec précaution les pales vers l'extérieur.



2. Installer ce côté dans les trous destinés au vis du ventilateur et pousser pour les fixer.



4. Répéter l'opération pour les restes coins du ventilateur.



2. Ne pas pousser les pales en plaçant les pouces sur la partie extérieure du ventilateur.

